



KBC Care instructions

Care instructions for wood fronts

Wood is a natural material. The graining and colour make every kitchen unique. Differences in the texture of the wood and in the colour, e.g. as a result of different incidence of light and sunshine, are characteristic of this natural product and are therefore completely normal. They reflect the high quality of the material and therefore do not constitute any grounds for complaint.

The surfaces of the wood front are sealed several times with high quality lacquer. All that is needed to clean them therefore is to wipe them down in the direction of the grain with a slightly dampened cloth so that any particles of dirt are removed from the pores.

Splashes of fat and other soiling should not be allowed to dry on under any circumstances and should be removed immediately.

Always wipe all surfaces thoroughly dry after cleaning. Excessively wet surfaces as a result of using too damp cloths or clouds of steam during or after cooking should be avoided as a matter of principle.

Always keep all surfaces dry! Standing water and other liquids may cause permanent damage!

As a living material, wood works when constantly exposed to extremely humid or dry air. In spite of its thorough lacquer coating, it swells or shrinks. The kitchen must stand in room with a temperate atmosphere. This applies both with regard to temperature and in particular for relative humidity.